



FROM THE TOOLBOX

Hex Key Set
Thread Locker (Optional)

NEED ADDITIONAL HELP?

Check out our YouTube channel
Call us: (714) 799-6711
Monday - Friday: 8am-5pm
Email: sales@assaultind.com

LEAVE US FEEDBACK

Visit Assaultind.com and leave a review of your product purchase. We appreciate your opinion... even if your wrong! :)

INSTALLATION

1. Install the Assault industries Push-to-talk (PTT) plate behind the steering wheel between the wheel and hub or wheel and quick release if applicable.
2. Align the holes on the PTT plate so that the "talk" button mount hole is in the designed position.

Note: As long as the holes align the "talk" button can be placed at any angle on the steering wheel.

3. Once properly aligned with the steering wheel, align to hub and thread bolts in to hold every thing in place.
4. Finger tighten all bolts then torque with a hex key.
5. When installing the "talk" button please follow the respective manufacturers' instructions.

